

Programming the “Level Position”

1. To access the programming screen, press and hold the voltage readout in the bottom left corner of the home screen. (Figure 1)
2. When the keypad appears, type in the code 9588. This code will take you in to the programming screen. If the 9588 code does not work on your system, use the code 3759. One of these two codes will work for all our systems. (Figure 2)
3. Now that you are at the programming screen, you will see the buttons necessary to manually level the RV. First run both rear leveling legs to the ground, then use the extend and retract buttons as necessary to achieve the true level position. A carpenter’s bubble level on the RV floor may be helpful for this step. (Figure 3)
4. When the RV is perfectly level, front to back, and side to side, press the “SET” button in the bottom left corner. This will program the system’s “level position” to the RV’s current position.
5. The system will return to the main screen. You will now be able to successfully enjoy the auto level function.

Figure (1)



Figure (2)



Figure (3)



⚠ WARNING

BAL Leveling systems are not designed with safety features and/or warning messages while programming the “level position” in this mode. Be careful not to put the RV in a twist or any other undesirable position that may cause damage to the leveling system and/or the RV. This service information is designed for experienced RV technicians and not designed for use by the general public.