



# MODEL 25030 KING PIN STABILIZING JACK

FOR USE ON FIFTH WHEEL TRAVEL TRAILERS

## SUPPLEMENTAL INSTALLATION AND OPERATING INSTRUCTIONS

The Deluxe Model 25030 King Pin Stabilizing Jack is equipped with an additional (part no. P852004) extension tube assembled inside its (part no. P852001) support leg. Please refer to the parts list on the front page of the Model 25015 Assembly and Operating Instructions for part identification.

### INTENDED USE

The additional part number P852004 extension tube is used on fifth wheel trailers that are designed with king pin boxes that are located higher from the ground or a trailer position where the king pin box is higher from the ground.

### STABILIZING

1. Position and level the front of your 5th wheel trailer by using your trailer's landing gear.
2. Raise the king pin jack assembly under the king pin until the king pin is located between the jack flanges. Please refer to the drawing on the back page of the Model 25015 Assembly and Operating Instructions. The top of the jack flanges should be touching the king pin box. In order to accomplish this, it may be necessary to lower both extension tubes and activate the jacking leg. There should be approximately a four foot distance between the base pads. The base pads must sit flat on the ground and the jack and support legs should form an approximate equilateral triangle with the ground for best stabilizing results.
3. Follow steps 3, 4 and 5 under "STABILIZING" on the back page of the Model 25015 Assembly and Operating Instructions.

### REMOVAL

Follow the "REMOVAL" instructions on the back page of the Model 25015 Assembly and Operating Instructions.



CORPORATE HEADQUARTERS  
365 W. Victoria St. • Compton, CA 90220 • (310) 639-4000



NORCO INDUSTRIES, INC. BAL is a registered brand name of Norco Industries, Inc.