



⚠ WARNING

When lifting an RV with a floor jack, it is critical to position the jack directly under the vertical web of the frame rail. Lifting and/or supporting the RV under the bottom lip (or flange) of the rail can result in damage to the frame and/or RV and create an unsafe working environment.