

Correctly wired in pairs

Incorrectly wired together

Crossing one or more wires from the jack motors to the control box pigtail can cause many issues, including but not limited to:

- Excessive amp draw.
- Blown fuses on the control box.
- One side not fully retracting.
- One side not fully extending.
- Motors failing due to over-heating.

