



- BOTTOM CABLES
- TOP CABLES
- ADJUSTMENT CHAIN

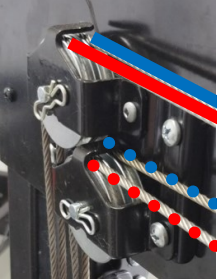

BTM IN CABLE GOES TO TOP PULLEY CLOSEST TO THE WALL
BTM OUT CABLE GOES TO TOP PULLEY CLOSEST TO INTERIOR



BTM OUT CABLE GOES TO TOP PULLEY CLOSEST TO THE WALL
BTM IN CABLE GOES TO TOP PULLEY CLOSEST TO INTERIOR

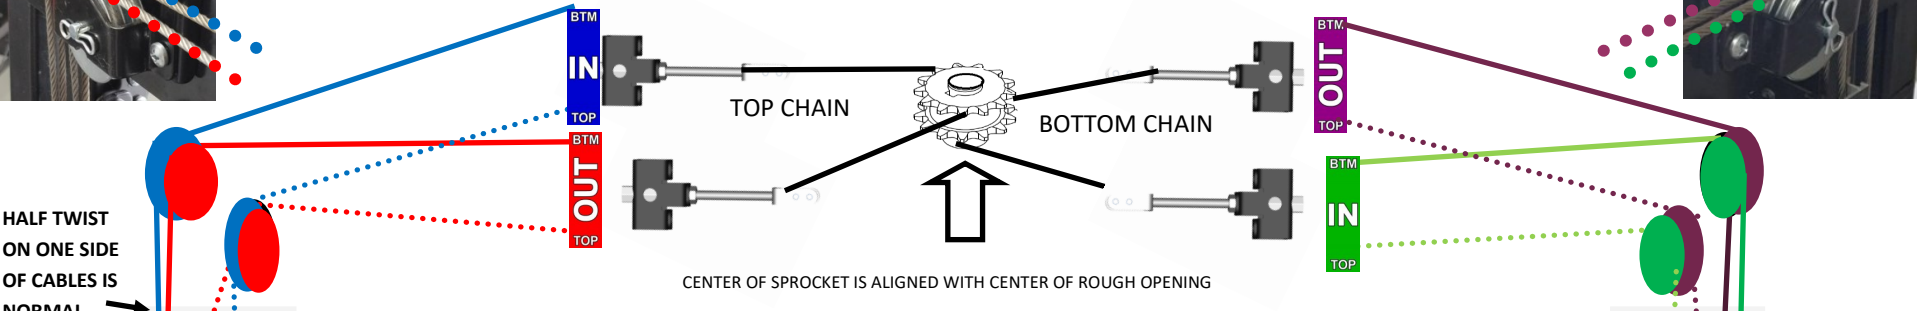

HALF TWIST
ON ONE SIDE
OF CABLES IS
NORMAL

OUT TOP
Interior
Standoff
Brackets

Exterior
Standoff
Brackets

IN TOP

IN BOTTOM

VIEW FROM INTERIOR

IN TOP

IN BOTTOM

Exterior
Standoff
Brackets

OUT TOP
Interior
Standoff
Brackets

Interior
Standoff
Brackets

OUT
BOTTOM