
RECALIBRATING THE LEVEL POSITION

The Auto Level position is set prior to the installation of the leveling system. The factory settings can be overridden to fine tune the level position as needed.

1. Press **MANUAL**.
2. Press **MANUAL LEVEL**.

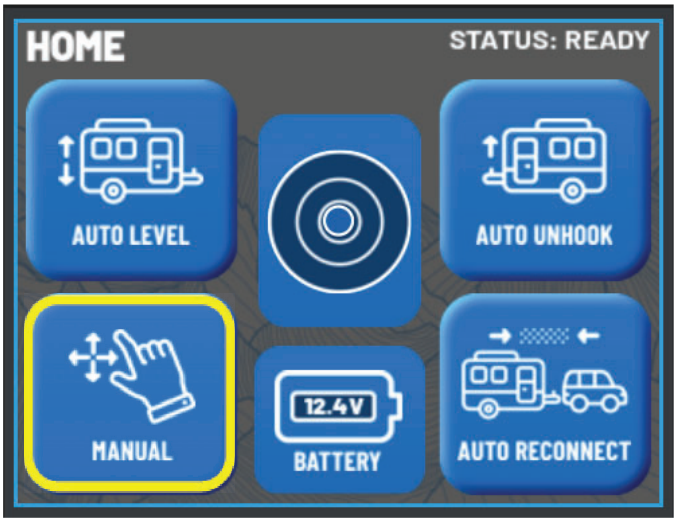




Stabilizer jacks must be completely retracted before manually operating leveling jacks.

3. Using an external bubble level to assist you in achieving the level position, operate each set of leveling jacks until the RV is level from front to back and side to side.

4. Manually operate each set of jacks to the desired level position.

The jacks will move as follows:

- **FRONT**: Tongue jack on the front of the RV.
- **REAR**: Both leveling jacks on the rear of the RV (closest to the axles).
- **LEFT**: The left rear leveling jack (road side).
- **RIGHT**: The right rear leveling jack (curb side).

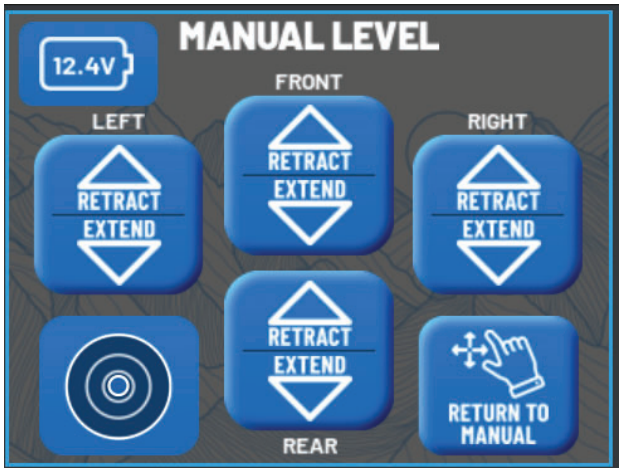

5. When the RV has been leveled front to back and side to side. Press **RETURN TO MANUAL.**





RECALIBRATING THE LEVEL POSITION

5. Press **Settings**



6. Press **SET LEVEL**
7. Press **CALIBRATE**

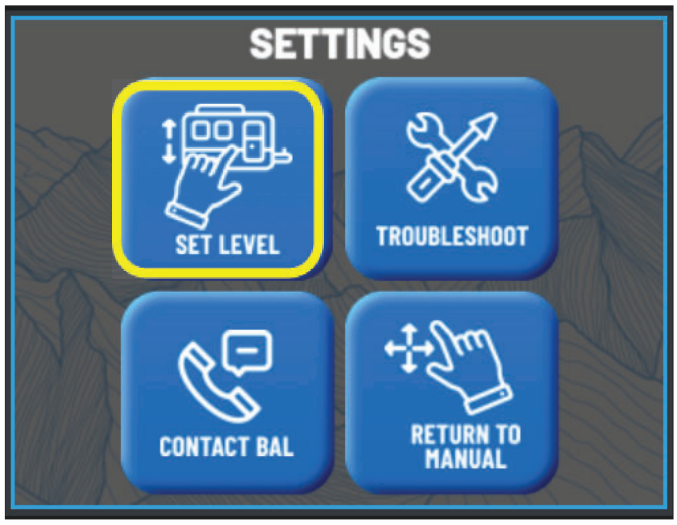

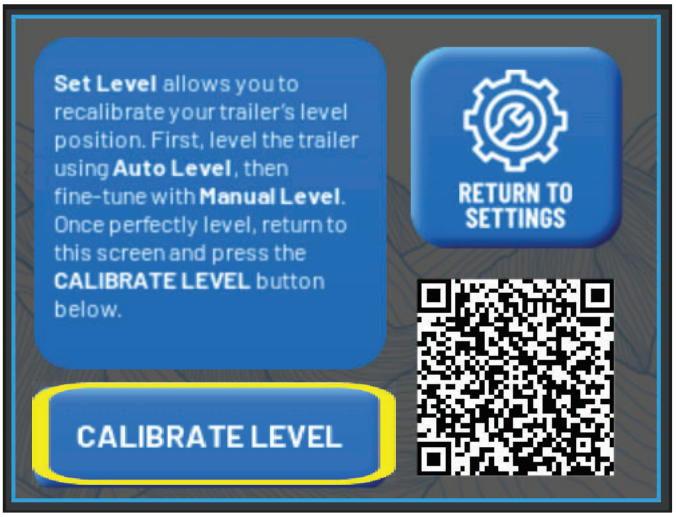



8. The control sensors are now calibrated to the RV's current position.

