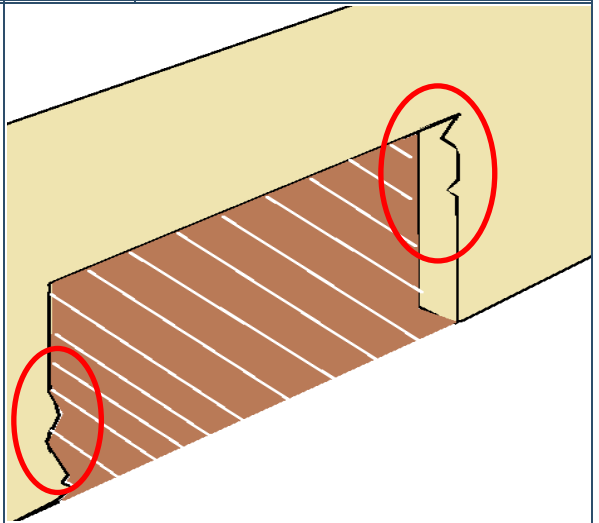
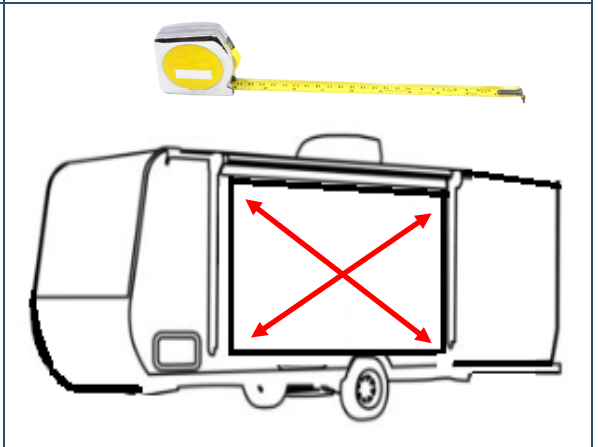


CABLE SLIDE OPENING PREP	BRAND: BAL ACCU SLIDE	CREATED DATE: 07/1/2024
ID NUMBER: SQS.ACU.001	TYPE: All Slides	Revision:

<p>Step 1:</p>	<p>Clean Rough Opening</p>	<ol style="list-style-type: none"> 1. Remove all burrs, glass overhang or metal overhang. 2. Overhang of material will prohibit the jambs from seating against the rough opening. 	
<p>Step 2:</p>	<p>Cross Measure Rough Opening</p>	<ol style="list-style-type: none"> 3. Cross measure the rough opening. <p>Tolerance: 1/4 [+/-]</p>	
<p>Step 3:</p>	<p>Install Sill Material</p>	<ol style="list-style-type: none"> 4. Install drip cups or aqua-diverters into the bottom corners of the rough opening [when applicable] 5. The sill material should extend to the edge of the rough opening. 	