



Lubrication Instructions




- 1. Fully extend the slide-out room.
- 2. Wipe the TOP of the slide-out arms free of any dirt or debris.
- 3. Apply the lube directly to the top of the slide-out arms. We recommend using a wax based, self-cleaning, lubrication, such as <u>DuPont Chain-Saver Wax-Based Chain lube</u>.
- 4. Cycle the room one complete time while spraying the lubrication on/into the top nylon wear block as needed. (Photos on pages 2 & 3).
- 5. Complete step #4 as needed until the slide-out is operating smooth and quietly. In certain circumstances 24-hour dry time may be required to eliminate excessive noise and/or vibration.

INS.SLD.001 Rev B 01/07/2022





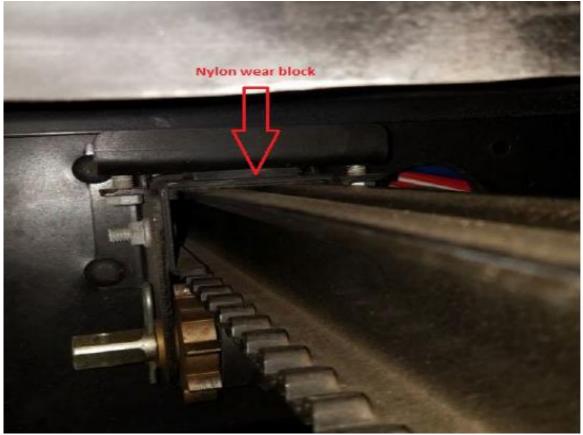

INS.SLD.001 Rev B 01/07/2022